

## **Sony Detector Card BD15 (replacement)**

### **Equipment.**

Basic tools.

### **Purpose.**

Replacement of BD15 card.

### **Tolerance.**

None.

### **Method.**

The BD15 detector card, is located at the front of the machine, underneath the computer.

1. Remove the two plugs from the card to be removed.
2. Remove the Phillips head screw at each end of the card.
3. Lift the card straight out of its housing.
4. Insert new card.
5. Replace plug connectors.

The two connectors on each BD15 card may be swapped between axis for faultfinding purposes.